

Functional Changes between version 4.3 and 4.4

- Added support for GeoTIFF charts
- Added single server WMS client
- Vector and raster mix mode available for all raster chart types (ARCS, BSB, GeoTIFF and WMS) over and/or under the raster chart.
- Looping replays enabled.
- Added support for automatically importing default settings on start without valid settings.
- Improved drawing of bathymetric ENC's and AML-CLB.
- Enabled mixing of official with non-official, as well as non-official with official bathymetric data and base data.
- Enabled showing of VMAP0-1 data.
- Added short-key 'O' to zoom to the smallest range where the current chart is completely contained in the chart window.
- Advanced product filtering menu added.
- Improved drawing of multiple vector data products simultaneously.
- Added manual opening of single cells through open file dialogue, drag and drop or command line parameters.
- Added positioning of ships frame in a 3x3 grid of positions on the screen with the short keys 1-9 as alternative to automatic frame positioning for example when docking. Also a small control window is available with the same functionality.
- DNC mode removed (DNC, ENC, VMAP and AML (and other) vector chart data is now showed side by side and the different types can be enabled or disabled using the advanced product selection bar.
- Added short-key "F5" to activate WMS charts and "F6" to activate GeoTIFF charts.
- Support for AML V3.0.
- 3D view of ENC charts using OpenGL.